



7" Digital Photo Frame

Instruction manual

L7DPF17

12 month manufacturer's warranty



Contents

Safety precautions.....	2
Package contents.....	3
Guide to the device.....	4
Preparations.....	5
Main menu.....	7
Photo play.....	7
File manager.....	8
Calendar.....	9
Setup.....	9
Troubleshooting.....	11
Specifications.....	12

Safety precautions

Congratulations for purchasing your new digital photo frame. With this Digital Photo Frame, you can easily and quickly view photos directly from your digital camera's memory card. You can even create a slide show with multiple transition effects. The Digital Photo Frame is compatible with the following memory cards and device: SD, MMC and USB device.

Warning



- High voltage inside. Do not open the casing of the digital photo frame. Refer servicing to qualified personnel only.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- To avoid permanent loss of data, do not insert or remove memory cards or USB device when the power is on.

Safety instruction

- The product shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flames sources, such as candles, should be placed on or near the product.
- Keep the digital photo frame clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Press the buttons gently. Pressing them or the screen too hard can damage the digital photo frame.
- Do not use the product in an extremely dry environment as this can lead to static discharge, which can damage the digital photo frame.
- Do not subject the product to harsh impacts. Do not drop the appliance. These may result in damage to the product and loss of data.
- Do not attempt to repair or disassemble the unit by yourself. Only qualified service personnel should perform repairs.
- The digital photo frame is for indoor use only.
- Only use the DC 5V power adaptor supplied with this product. Do not unplug the adaptor when viewing the pictures.
- Do not block the ventilation holes on the back of the digital photo frame.
- Children should be supervised to ensure that they do not play with the appliance.
- Please unplug the product when you do not intend to use it for a long period of time to prevent overheating and damage to the screen.
- Please insert the plug into the DC IN jack completely on the unit before connecting the AC adaptor to mains supply.
- This product can only play files with compatible format.
- Do not use the product in extreme temperature, the best operating temperature is 5°C-35°C.
- Do not allow metallic objects to touch the DC plug when the player is on.

Cleaning and care

- Always turn off the unit and remove the power adaptor from the mains outlet before cleaning the unit.
- Use a soft dry cloth to clean this product.
- Never spray or pour liquids directly onto the screen or casing.
- Do not use abrasive materials or chemical cleaners such as alcohol, benzene, etc. Do not allow any water or other liquid to enter the appliance.
- Do not drop the unit, which is a complicated electronic device and cannot withstand shock from falls.
- Do not hit or scratch the screen. Handle it with care. The LCD panel of the digital photo frame is made of glass and therefore is sensitive to excessive force or contact with sharp edges.

Package contents


Please make sure the following items are included in the package. If an item is damaged or missing, please contact your dealer.




Main Unit



Stand

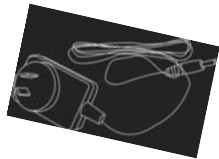

AC Adaptor

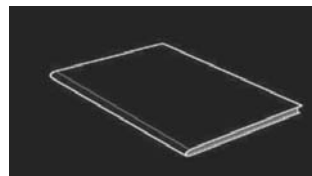

User Manual


Items not shown:

Statutory notice

Warranty card

Guide to the device

Digital Photo Frame view

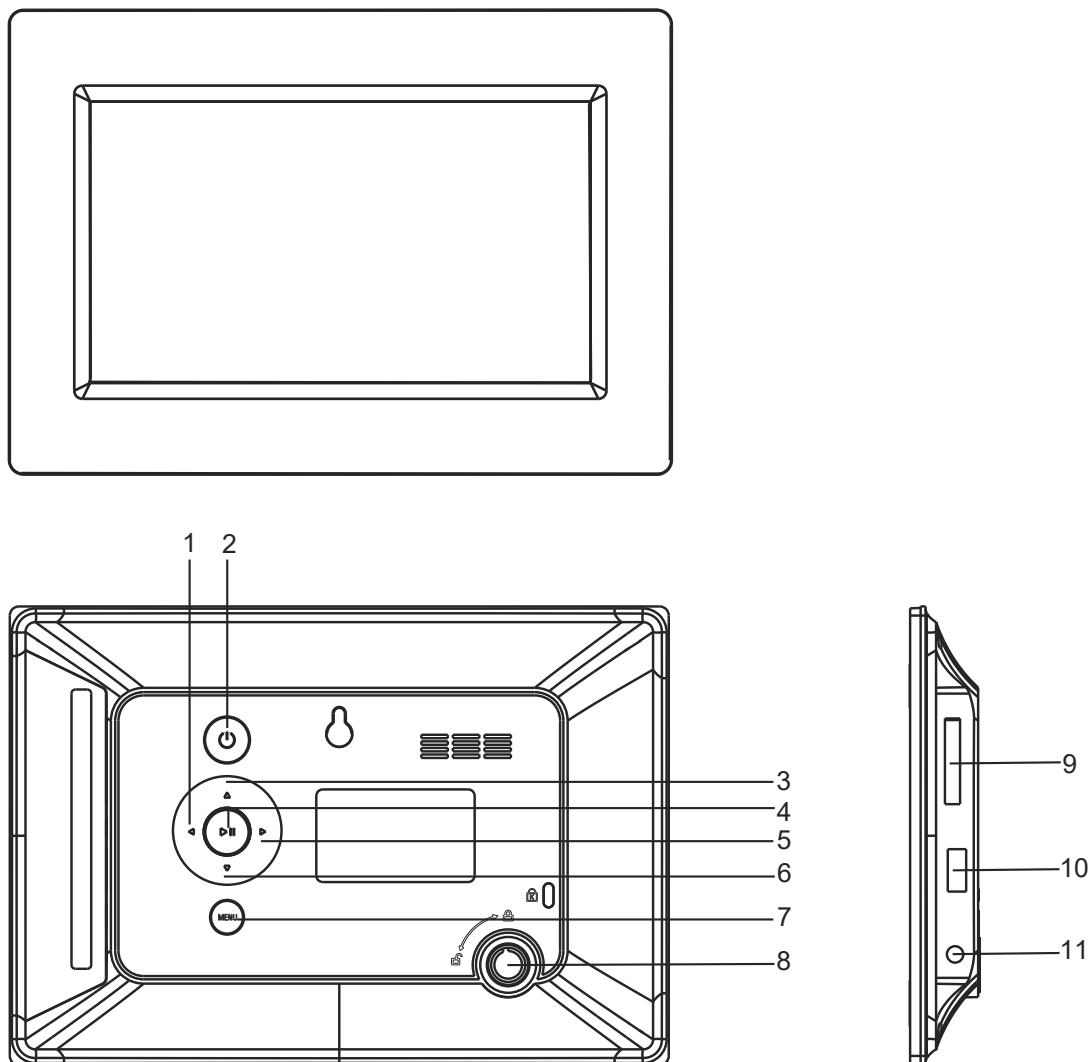

Keys definitions

1. Right key: Press it to navigate RIGHT when selecting options.
2. Power key: Press it to power on the unit or power off the unit.
3. Up key: Press it to navigate UP when selecting options.
4. Play/Pause key: Press it to confirm option. In slideshow mode, press it to pause or play slideshow.
5. Left key: Press it to navigate LEFT when selecting options.
6. Down key: Press it to navigate DOWN when selecting options.
7. Menu key: Press it to return to the upper menu.
8. Stand hole to hold the digital photo frame.
9. Card reader slot for connecting SD/MMC cards.
10. USB port for connecting most of the USB device directly once all photos are loaded into the USB device.
11. DC 5V IN jack for connecting the supplied AC adaptor to power the digital photo frame.

Note: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Preparations

Getting started:

Step 1: Install the stand at the rear of the digital photo frame.

Step 2: Insert memory devices into the correct slot.

Step 3: Insert the DC plug of adaptor to the unit and plug the power adaptor into an available AC 100-240V wall outlet to power on the unit.


Installing the stand

Install the stand to the stand hole; place it on a stable and flat surface so that it stands up.



Connecting the power supply


1. Place the digital photo frame on a stable and flat surface.
2. Insert the DC plug of the adaptor into the DC 5V IN on the side of the digital photo frame, and then connect power adaptor to an available AC 100V-240V 50/60Hz mains outlet, the unit will then automatically power on.
3. Press the [⏻] button to power ON/OFF.
4. When the unit is not being used for a long time, press the [⏻] button to power it off again and unplug the AC adaptor from mains outlet.

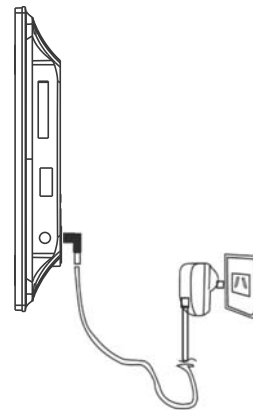

Connecting a USB device

You can view the pictures from the USB memory device by connecting it to the digital photo frame.

Note: Not all USB storage devices can be read in this digital photo frame.

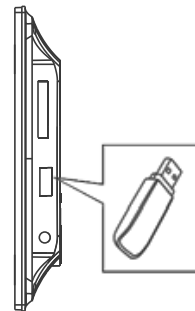


Inserting memory cards

To view the pictures from a compatible memory card, insert it into the respective card slot in the Digital Photo Frame.

This Digital Photo Frame is compatible with the following memory cards: • SD • MMC

Insert a SD or MMC card into the 2-in-1 card slot correctly according to the indication on the unit.

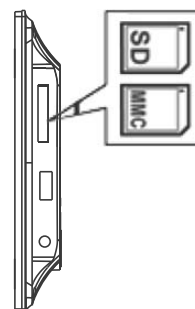

Notes:

1. This unit can play only pictures in USB device or memory card.
2. If your USB device or memory card is loaded with images but do not display, the format of your USB device or memory card might not be compatible with the unit.
3. Do not force the memory card into the slot. If you are not able to insert the memory card easily and completely, you may have inserted it incorrectly.
4. To remove the card, pull out the card slowly. Please DO NOT remove the memory card just after inserting it into the unit or when the unit is processing the files. Wait until the screen is stable.
5. SD Card maximum support is 32GB (FAT32 format), USB maximum support is 8GB(FAT32 format).
6. This unit may not be compatible with all USB devices and memory cards, this is not an indication of a problem with the unit.

Selecting the memory device

Plug in memory device and then press the [⏻] button to power on the Digital Photo Frame, it will enter slide show automatically. Press MENU key to exit slideshow mode and enter the thumbnail mode, press MENU key twice to enter into memory device selecting interface. Press ◀▶ key to select the desired device. Press the ▶|| key twice to return to the thumbnail gallery.



Note: The Digital Photo Frame may be slow to read some large capacity memory cards and USB devices. Please wait for the device to be recognized.

1. Press ◀▶ key to choose an input source : Memory Card or USB device.
2. Press ◀▶ key to choose Photo mode on main menu.
3. And then press ▶|| key to confirm your selection and start to play the photos.

Main menu

In the memory device selecting interface, press the $\triangleright||$ key to enter into main menu; press $\triangleleft\triangleright$ key to select Photo/File/Calendar/Setup mode, press $\triangleright||$ to enter into the selection.



Photo play

Viewing photos

When a SD/MMC card or USB device containing photos is inserted, a photo slideshow will start automatically.

If you press MENU key, a thumbnail gallery will appear.



Press $\triangleleft\triangleright$ key to select the desired picture.

Press $\triangleright||$ key to display the selected picture.

Press $\triangleright||$ key for the second time to enter slideshow mode.

Press $\triangleright||$ key again to pause the slideshow.

Press MENU key to return to Thumbnail, press again to return to main menu.

Adjusting photos

When playing a photo, long press MENU key to enter into photo adjusting interface. Press $\Delta \nabla$ key to select Save Picture/Rotate/Zoom/Exit. Press $\triangleright ||$ key to confirm selection.



Save Picture: Save the photo into built-in memory if there is an available built-in memory.

Rotate: Rotate the photo.

Zoom: Enlarge the photo.

Exit: Exit the photo adjusting.

File manager

In main menu interface, press the $\triangleleft \triangleright$ key to select the File mode, and then press the $\triangleright ||$ key to enter into File mode.

Long press MENU key to Delete File or Exit, then press $\Delta \nabla$ key to select option, press $\triangleright ||$ key to confirm selection.

Press $\Delta \nabla$ key to select the desired files or pictures.

Press MENU key to exit the interface.



Calendar

In main menu interface, press the ◀▶ key to select the Calendar mode, and then press the ▶|| key to enter Calendar interface.

Calendar photo will be displayed automatically after entering Calendar mode.

Press ◀▶ key to view month display.


Press MENU key to return main menu.



Setup

The Setup interface lets you customise and configure the digital photo frame.

1. Press ◀▶ key to select the Setup mode on the main menu, and press ▶|| key to enter into Setup interface.
2. Press ▲▼ key to select the desired setting.
3. Press ▶|| to enter setting, select the items with ▲▼ key, then press ▶|| to confirm.
4. Press MENU to exit.

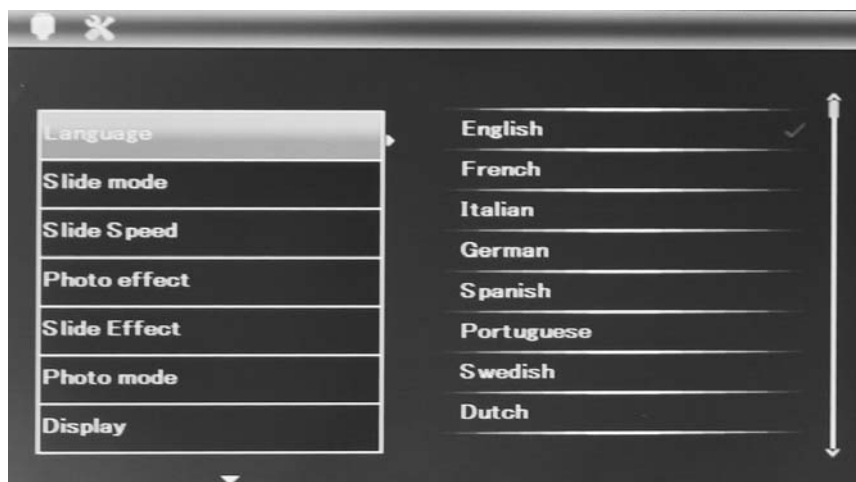 

Language: Select the system display language.
Slide mode: Select the slide mode between Single window/Four windows/Triple windows.
Slide speed: Select interval time for slideshow.
Photo effect: Select photo effect between Color/Mono/Sepia.
Slide effect: Select the style of photo transition while playing slideshow.
Photo mode: Select photo mode between Auto Fit/Optimal/Full.
Display: Adjust the display Contrast/Brightness/Saturation/Tint.
Set time/date: Setup the Calendar and clock.
Set time format: Select time format to 12-hour or 24-hour.
Format built-in memory: Select No or Yes to format the built-in memory.
Reset Setting: Select to reset all settings to default.
Exit: Select to exit the setup mode.

Troubleshooting

Symptom or problem	Possible cause/solution
No power	The power connector is not completely inserted into the unit.
Screen freezes	The unit may have malfunction. Switch it off and wait for a few minutes before turning it on again.
Characters in display are incorrect	Make sure that you have selected the correct language.
Unable to insert memory card or USB device.	Memory card or USB device is not inserted correctly; insert the card or USB device in the opposite side.
The unit cannot recognize the memory device inserted.	<ol style="list-style-type: none"> 1. Memory card or USB device is not inserted correctly. 2. The memory device may be damaged. Please try a new device. 3. Make sure that you are using a memory card type, which is supported by the unit. 4. Some unpopular memory cards or USB devices are not compatible with the product. Use a memory card or USB device, which matches with the Digital Photo Frame. 5. It is slow to read the mass capacity memory device; you should wait for a minute. <p>Note: Not all USB storage devices or Memory cards can be recognized for this digital photo frame.</p>
There is a memory card or USB device inserted in the unit, but the photo frame is not able to read the card or USB device.	<ol style="list-style-type: none"> 1. Make sure that you are using a memory card or USB device type, which is supported by the unit. 2. Make sure that the memory card or USB device is inserted all the way into the correct slot. 3. The memory card or USB device is damaged.

Specifications

Display	Screen size: 7" color TFT LCD Screen resolution: 800 x 480 pixels
Power adaptor	Input: AC100~240V, 50/60Hz 0.18A Output: DC 5V 1A For use only with Audio/Video or similar equipment.
USB port	USB port 2.0 supports most of the USB device
Support memory cards	SD, MMC
Support picture format	JPEG only
Operating temperature	5°C ~ 35°C

NOTE: As a result of continual improvements, the design and specifications of this product are subject to change without notice and may differ slightly from the unit illustrated on the packaging.



LINDEN

Distributed by:
M.E.W. (Australia) Pty Ltd,
15 Vaughan St, Essendon Fields, Vic 3041
ACN 152 719 036
Customer care: Aus-1300 530 800
customer care@lindenproducts.com.au
lindenproducts.com.au

While every effort has been made in the preparation of this instruction manual the publishers cannot be held responsible for the accuracy of the information contained herein or any consequence arising from it.

