



7" Portable DVD Player

Instruction manual

L7PDVD17

12 month manufacturer's warranty



Distributed by:
M.E.W. (Australia) Pty Ltd,
15 Vaughan St, Essendon Fields, VIC 3041
ACN 152 719 036
Customer care: Aus-1300 530 800
customer care@lindenproducts.com.au
lindenproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.



Contents

Guide to the Device.....	2
Caring for the Environment.....	3
Safety Information and Warnings	4
Items in the Box.....	7
Installation Instructions.....	8
Basic Set Up	10
Operation Instructions	13
Troubleshooting	17
Care and Maintenance	18
Technical Specifications	18

Care and maintenance

CAUTION: Always switch off the unit before performing any cleaning.

- Wipe the outer surface with a soft cloth.
- Do not use abrasive cleaners or solvents.
- Do not allow water to enter inside the unit.

Disc Care and Maintenance

- Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.

Handling a Disc

- Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc.
- To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not subject discs to prolonged exposure of direct sunlight, high humidity, or high temperatures.
- Do not bend or press discs.
- To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.

Cleaning a Disc

- Use a dry, soft cloth to wipe off any fingerprints or dust from the recorded surface of the disc.
- Wipe in a straight line radially from the centre to the outside edge of the disc.
- Small dust particles and light stains will not affect playback quality.
- Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

Technical specifications

Adaptor input:	AC 110V-240V 50/60Hz
Adaptor output	DC: 12V 1.5A
Power consumption	<=9W
Battery runtime	2 hours
Signal system	NTSC/PAL/AUTO
Video output	1±0.2V (p-p), 750hm, Negative sync, 3.5mm mini jack x1
Audio output	1.2 Vrms (1 Khz, 0dB), 3.5mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x1
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	7 inch (16:9)
Resolution	800x480 (QVGA) Pixels
Laser Wavelength	650 nm
Operating conditions	Temperature 0°C to 35°C.
Operation status:	Horizontal
Dimensions	190x168x44mm (Main Unit & Batt)
Net Weight	0.6 Kg

Troubleshooting

If you experience a problem with your appliance, check here for solutions to help you solve the problem. If after these checks you are still experiencing problems with your appliance, contact Customer Service for advice.

There is no power to the device.

- Ensure that the Power Switch on the main unit is physically set to the ON position.
- Ensure that the AC adapter cord is securely connected to the player and the proper wall outlet.

The device will not play the disc.

- Ensure that a supported disc is loaded in the player label-side up.
- Ensure that the disc's rating level does not exceed the player's parental rating level.
- Ensure that the disc is not damaged or too dirty.
- Clean the disc or try another disc. Moisture may have condensed inside the player.
- Remove the disc and leave the player on for 1-2 hours and then try again.

There is no picture when connected to the TV.

- Ensure that the TV set has been powered on and is set to the correct AV mode
- Ensure that the connections between the player and the TV are secure and correct.
- Check if the connection cables are damaged.

The picture is noisy or distorted.

- The disc may be damaged or dirty. Clean the disc or try another one.
- Reset your TV's color system.
- Ensure that the player is connected directly to the TV (and not through a VCR, cable box, satellite receiver, etc.)

The picture is not full-screen.

- Change the aspect ratio setting of your player from the Setup menu.
- Select a different aspect ratio option from the DVD disc menu.

There is no sound or distorted sound.

- Ensure that the TV and amplifier have been turned on and properly set up.
- Ensure that the TV and amplifier connections are secure and correct.
- Try a different Audio track of the DVD by pressing AUDIO.
- Ensure that the MUTE function of the TV, Amplifier, or Player is not engaged.

The remote control doesn't work.

 
- Ensure that the Power Switch has been physically set to the ON position.
- Ensure that there are no obstacles between the remote and the player.
- Point the remote at the remote sensor on the main unit.
- Ensure that the batteries in the remote retain a charge and have been installed correctly.
- Try replacing the remote's batteries.

The player has malfunctioned.

- Turn off player, after 1 minutes, turn on the player again.


Guide to the device

Front View

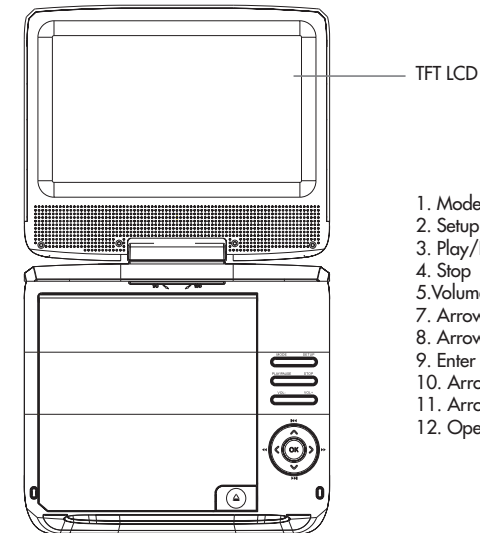


1. Mode
2. Setup
3. Play/Pause
4. Stop
5. Volume /-
7. Arrow Up/Prev
8. Arrow Left & Fast Reverse
9. Enter
10. Arrow Right & Fast Forward
11. Arrow Down/Next
12. Open

 Back View

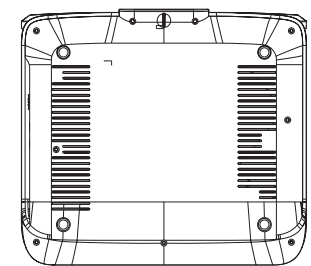

- Power On Indicator
- Battery Charge Indicator
- Control Receiver

 Right View

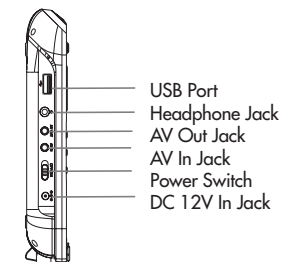

- USB Port
- Headphone Jack
- AV Out Jack
- AV In Jack
- Power Switch
- DC 12V In Jack

Note: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

The plug must be rendered useless and the cable cut off directly behind the appliance to prevent misuse.



Multi-language Subtitles

During playback of a DVD that has been mastered with subtitles, press SUBTITLE to view the available subtitle tracks. (A DVD may have up to 32 selectable subtitles.)



CD Ripping Function

You may rip the CD disc content to USB or SD memory device. When it is playing CD disc, insert USB or SD memory device to the unit, and then press Copy button to run to the ripping function menu. And then follow the instruction. Do not take out the USB or SD Memory device during ripping.

Copy Function

The file format: MPEG-4, Mp3, TXT, JPG format in the disc or in the USB/SD memory device can be copied to USB and SD memory device. When the player is playing one of these formats, press Stop button first, and then choose the files that you want to copy, and then press Copy button to fulfill the copy operation.



Goto

Press this key one time to select the disc time.
Press this key two times to select the track time.
Press this key three times to select the track from the available tracks.



Clear

When there is wrong input, press this key to delete.



Program

Use this key to pre-set tracks to play in a particular order.
Press 'PROG' key to enter the menu. Use direction keys to select the field, and arrange them in order by entering numbers for each track.
Once the tracks are in order, press 'PLAY' to start playing.
To exit, press 'PROG' key again and then press 'STOP'.



N/P

Set the format of this player to select the color format of TV: "NTSC/ PAL/AUTO".



Mode

Press Mode key to switch between DISC/SD/USB mode and AV IN mode.
Remark: the volume will turn to initial value when you switch to another mode.

Function buttons

OSD

OSD

Press the OSD button to show playback information.

Setup

Setup

Press it to enter the player's setup menu. Enter the Setup menu to adjust the player's Internal settings, please see the SETUP section for more details.

Zoom

Zoom

Press ZOOM to change the magnification level of the picture. During DVD playback, each successive press of ZOOM will change the level of magnification. During JPEG CD playback, each successive press of ZOOM will change the level of magnification.

When the magnification level is greater than Normal/100%, use the NAVIGATION keys to pan around the magnified picture.

When the magnification level is equal to 100%, use the NAVIGATION keys to rotate the picture.

Note: The picture quality will decrease as the zoom level (magnification) increases.

Audio

Audio

During playback of a DVD that has been mastered with alternate language/audio tracks, Press AUDIO to hear the alternate tracks. (A DVD may have up to 8 selectable audio tracks.)

Title

Title

Press the TITLE button during DVD playback to return to the DVD's Title menu.

PBC

PBC

Press the PBC button during VCD playback to return to the VCD's Main PBC.

REPEAT

Repeat Playback of Chapter/Title/ALL of a Disc

Press REPEAT to change the repeat mode of the player. Each successive press of REPEAT will change the mode as follows:

Repeat Chapter -> Repeat Title -> Repeat Disc -> Repeat Off

A-B

Repeat from A to B

Press 'A-B' once to set initial point (A).

Press 'A-B' a second time to set final point (B).

Now the program will be played from A to B repeatedly.

Press 'A-B' a third time to cancel Repeat.

DVD/USB


DVD/USB mode:


Press DVD/USB key to switch between DISC mode/USB mode Supports USB 32GB Max (FAT32 format).

Supports file formats VCD/SVCD/DVD/MP3/MP4/JPEG/HDCD/CDDA/WMA/CD-G/HDVD/Kodak PICTURE CD/ FLV in USB memory device.

Safety information and warnings

 **CAUTION:** RISK OF ELECTRIC SHOCK DO NOT OPEN

 **CAUTION:** TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT, REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.

 The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated (dangerous voltage) within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

This Digital Video Disc player employs a laser system. To Prevent direct exposure to the laser beam, do not try to open the enclosure or defeat the safety interlocks. When open and the interlocks are defeated, visible laser radiation is present.

Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure. DO NOT STARE INTO THE BEAM.

TEMPERATURE CAUTION: Do not leave the player in a closed car on a sunny day, exposed to direct sunlight or near any source of heat such as a Tv set. [Otherwise the surface of the player may warp, change colour or be damaged.] When the player is used for a long period: the surface may be hot; this is not a malfunction, however, take caution against burns.

USING CAUTION: To prevent electric shock, do not remove covers. No user-serviceable parts inside. Refer servicing to qualified service personnel.

BEWARE OF WATER SPLASHING: To avoid electric shock or short circuits, do not place the DVD player where water or other liquids might splash on to it.

LASER BEAM WARNING: Do not stare at the laser beam. Strong light will cause eye injury.

Notice:

The stand by/on switch on this unit will not completely shut off all power from AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power.

Therefore, make sure the unit has been installed that the power cord can be easily unplugged from the AC outlet. In case of an accident or to avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example: when on holiday)

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

Safety Information and Warnings

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tri-pod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
10. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, Consult your product dealer or local power company. For products intended to operate from Battery power or other sources, refer to the operating instructions.
11. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
12. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
13. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
14. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

Numeric Keypad

- Use the numeric keypad to skip directly to a DVD chapter or CD track. (Some discs may not allow direct access function.)
- Use the numeric keypad to input numeric data in menu option fields when possible.

Note:

Use the 10+ key for inputting numbers greater than 10. For example, to choose 11, press 10+ and 1; to choose 21, press 10+ two times and then 1.

Turning Display ON/OFF

- Press 'LCD ON/OFF' button on the unit to turn the display ON/ OFF.

Adjusting the Volume

- Press Vol+ and Vol- to adjust the volume up and volume down.
- Press 'Mute' button on the unit to mute the sound. Press again to restore sound.

Disc Error Messages

The following messages will be displayed on-screen if there is a problem with the format of the loaded disc.

- **BAD DISC.** The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop play completely, depending on how damaged the disc is.
- **DVD Players and discs are designed with region numbers which dictate the region (printed on the rear panel of the DVD case).** If the region number does not match the region number your DVD player is set to, you will not be able to play the disc. If you try to play the DVD, the message "WRONG REGION" will appear on OSD.
- The Region Number of this player is 4.

Note:

DVD disc production quality may vary, some discs may deviate from the industry stand-ard. Some incorrectly-formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

Power Management

If the player will not be in use for a long period of time, set the Power Switch to the OFF position and unplug the player.

Operation instructions

Basic Playback

1. Prepare the connections and power supply.
2. Load a disc.
Press the Open button to open the disc compartment lid. Load a disc with the label-side facing up. Close the lid manually.
If a single-sided disc is loaded upside-down, the player will display BAD DISC.
3. Start playback.
Press Play/Pause button to start playback (some discs may start playing automatically).



Play/Pause/Stop

Press to play the disc for the first time.
Press during playback to pause. Press again to resume playback.
Press during playback to stop the disc (Pre-Stop) Press to resume playback.
Press when the disc is Pre-Stopped to stop playback completely (When is pressed, the disc will start playing from the beginning.)



Next/Previous(Skip)

Press to skip forward one track (DVD, CD, MP3, etc).
Press to skip back one track (DVD, CD, MP3, etc).



Forward/Reverse (Search)

Press for a while to fast-forward/ reverse through the disc.
Each successive press of will change the rate of fast-forward/ reverse playback.
Play -> 2x -> 4x -> 8x -> 16x -> 32x



Slow

press SLOW key to slow down the speed of the playback.
Each successive press of SLOW key will change the rate of slow-motion playback.
Play -> 1/2 -> 1/4 -> 1/8 -> 1/16 -> 1/32

Press to resume normal playback.

Note:

Audio will be muted during fast- forward, fast-reverse, and slowmotion playback

15. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service Personnel.
16. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
17. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. Do not operate the product with a damaged adaptor, or if the product malfunctions, or is dropped and damaged in any manner.
21. If the adaptor is damaged, it must be replaced with an equivalent adaptor in order to avoid hazard.



Menu Navigation

To navigate DVD disc menus or the player's setup menus:

- Press the DIRECTION keys (arrows) to select a desired feature or option in the menu.
- Press ENTER to confirm a selection in the menu.
- For some menu options ,you may be able to use the numeric keypad to input data.

Items in the box



Main unit



Remote control



 
AC Adaptor



Car Adaptor



Earphones

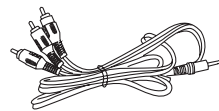

RCA Cable

Items not shown:
Instruction manual (this document)
Statutory warning
Warranty card

Rating

Item	Description	Default setting
Parental Control	Sets the maturity rating level of play. The player will not play any discs rated higher than this setting. This setting is password protected (the initial password is: 0000).	Level: 1 to 8(8 Adult is default)
Set Password	Change the Parental Ctrl password. Enter the old password, and then the new password. If you have forgotten the password, please contact Customer Service for assistance.	
DEFAULT	To reset all the settings to factory default settings. This does not reset the parental control password.	RESET

Disc requirements

This DVD player supports playback of the following discs.


Type	Disc mark	Content type	Disc size	Max playback time
DVD-Video disc		Audio + Video (moving picture)	12cm	133 min (SS-SL)
				242 min (SS-SL)
				266 min (SS-SL)
				484 min (SS-SL)
Audio compact disc (CDs)		Audio	12cm	74 min
Jpg CDs		Still picture	12cm	

This unit can play back DVD,DVD-R/RW, SVCD,VCD,CD,CD-R/RW,Kodak picture CD,MP3,MP4.

Setup

Various features of the player can be adjusted in the SETUP menu.

 1. Press **Setup** to enter the player's setup menu.
2. Press the direction buttons to select the desired item.
3. Press **ENTER** to confirm.

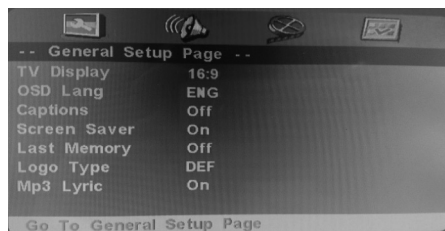

Language Setup

Item	Description	Default setting
OSD	Sets the language of the player's onscreen display.	English
Subtitle	Sets the default subtitle track of loaded DVDs	English
Audio	Sets the default language audio track of loaded DVDs.	English
DVD menu	Sets the default subtitle track of loaded DVDs.	English

Video

Item	Description	Default setting
Aspect Ratio	Sets the aspect ratio of the display 4:3 is used with widescreen television displays	16:9
TV System	Sets the player's Video Out signal type Set this to correspond with your Tv's Video System type. PAL is the standard used in Australia/New Zealand	PAL
Screen Saver	When set to 'ON' and the player is left unused for 5 minutes, the screen saver appears on the screen. When set to 'OFF' screen saver function is turned off.	ON
Last Memory	When set to 'ON' the DVD player remembers the last played time and continues playing from there the next time it is turned on.	OFF
Logo Type	Set the start logo as you like: default, Jacket, blue SCR, Captured	Default
Mp3 Lyric	Choose to display or turn off lyrics when playing mp3 files.	ON

Audio Setup

Item	Description	Default setting
Channel Output	Sets the audio channel mix mode (LT /RT, Stereo).	Stereo


Installation instructions

Audio & Video Connections

AV Out - Output the AV Signal
Connect the player to TV or a monitor by the RCA cable.

AV IN - Input the AV Signal

 - a). Connect the player to the external input source by the RCA cable.
- b). Press **Mode** to switch to AV IN mode

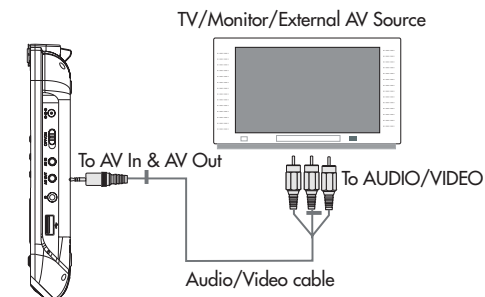

NOTE:

 
1. Refer to the user manual of your TV as well.
2. Before connecting the DVD player to a TV set, be sure to turn the power off and unplug both units from the wall outlet.

Power Connections


Connecting to the wall outlet

Caution:

- Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.
- Do not handle the power plug with wet hands. Doing so may cause electric shock.
- Only use AC adapters of the type specified here. Failure to do so may cause a fire or damage the player.

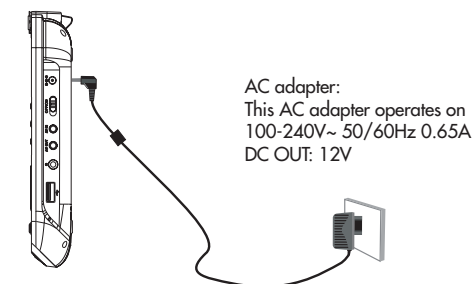

Using the car plug

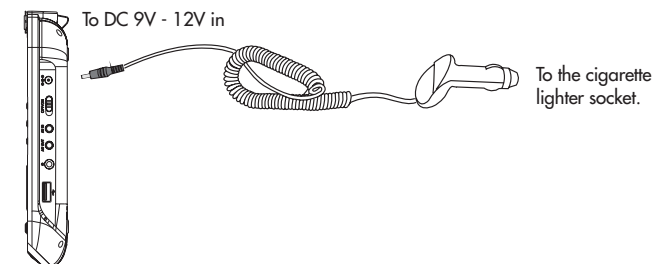 

! Disconnect this car power adaptor when not in use. Not for use in 24V vehicles

Using the Built-in battery

The unit has a built-in rechargeable battery (lithium-polymer). Charge the built-in battery before using it for the first time. It takes about 4 hours to fully charge the battery.

 
- Make sure that the power switch is set to the Off position before charging.
- To charge the built-in battery, just connect the AC adapter to the player and a specified wall outlet. See above. (The Battery Charge indicator will light red while it is charging; it will go off when the battery is fully charged.)
- The built-in rechargeable battery can be used for approximately 300 charge-cycles without any noticeable change in performance.
- When the built-in battery power is low, the low battery icon will flash on the upper right corner of the screen for a while, and then the player will turn itself off automatically.
- Battery runtime: 2 hours

Note:

- Use the specified charger.
- Never dispose of in fire.
- Do not use in high temperature or near heat sources.
- Do not open the cover.
- Refer servicing only to qualified service personnel.
- To get the longest service life of the built-in battery, charge at indoor-temperature.

Headphone/ Earphone Connection

- Be sure that your unit is at low volume level before connecting the headphones/earphones.
- Increase the volume gradually for your comfortable listening.

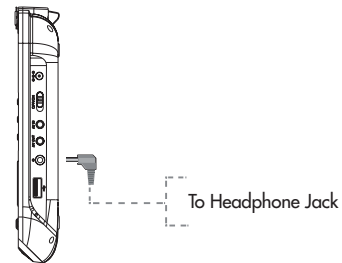

CAUTION:

Hearing experts advise against the constant use of personal stereos played at high volume. Constant high volume use can lead to hearing loss. If you experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

USB Connection

- Insert a USB memory device into the corresponding slot.
- Press the DVD/ USB button on the remote control to switch to USB mode.

Basic set up

Remote Control

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared remote sensor during operation. The sensor may not be able to receive signals properly if the sensor is covered, if there is a large object between the remote control and the sensor, or if it is exposed to direct sunlight or a strong case, change the direction of the light or reposition the unit to avoid direct lighting.



Refer to the diagram. Remove the battery compartment cover located on the rear of the remote control. Insert batteries, making sure to match their polarities (+/-) to the markings on the inside of the compartment. Replace the cover.

To use the remote, point it at the remote sensor of the player. Operate the remote within 15 feet of the sensor and at an angle of +/- 60 degrees.

Batteries in the remote will last for approximately 1 year. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.

Remove the batteries from the remote if it will not be used for a long period of time.

