



# Portable Wireless Speaker

Instruction Manual

---

LPBSK17

---


12 Month Manufacturer's Warranty




# Table of Contents

Guide to the Portable Wireless Speaker	2
Important Safety Instructions	4
Caring for the Environment	8
Contents in the Box	10
Operating Instructions	11
Troubleshooting	19
Technical Specifications	21

# Guide to the Portable Wireless Speaker

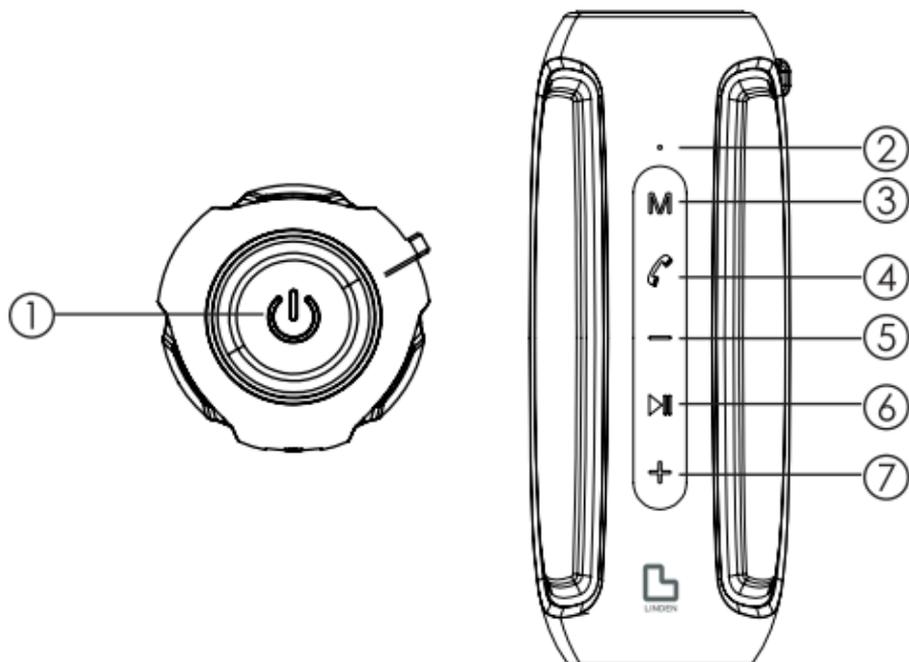

1. Power ON / OFF
2. Microphone
3. Mode - Manually change mode
4. Handsfree
5. Volume Control Decrease / Previous
6. Play / Pause / Bluetooth Disconnect
7. Volume Control Increase / Next

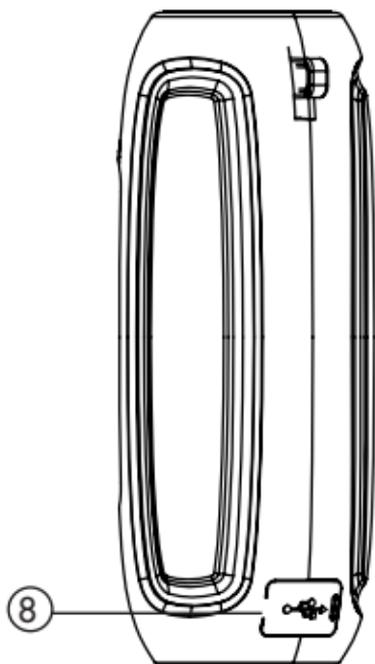

8. Micro USB Charge Port for charging only  
AUX input port for direct connection  
TF/SD Card input

## **Important Safety Instructions**

Please read this instruction manual carefully and completely before using the product.

Make this instruction manual easily accessible to all users at all times. Always include this instruction manual when passing the product on to third parties. Please retain manual for all future use.

Use the product with care and store it in a clean dust free environment. Turn off the speaker after use to conserve battery power.

Only use the supplied accessories supplied with the speaker.

Keep out of reach of young children. This apparatus is not suitable for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the apparatus.

**DO NOT** block any ventilation openings.

Install in accordance with any specific manufacturer's

instructions. Always allow a sufficient gap around the apparatus to avoid overheating.

**WARNING.** Do not place any naked flame source, such as lighted candles on the electrical apparatus.

For household use only, this apparatus is not intended for commercial use.

**DO NOT** attempt to service this apparatus. This apparatus requires specialist servicing and knowledge to retain the safety of the apparatus.

**WARNING:** Do not insert any objects into any openings of the electrical appliance

**DO NOT** place near any heat source such as radiators, gas heaters, stoves or other heating apparatus.

**AVOID** any exposure to direct heat or direct sunlight.

**WARNING!** This is a class III product please connect to suitable USB power socket. Ensure any USB socket used for charging is 5VDC and rated in excess of 500mAh.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Do not leave the speaker on charge for extended periods of time. Once the speaker charging LED indicator turns off disconnect from charging.

This apparatus is provided with a non-replaceable Lithium battery, DO NOT ATTEMPT to replace this battery.

**WARNING:** This apparatus is IPX6 waterproof. This speaker is NOT submersible and should NOT be submerged in water.

**IMPORTANT:** Liquids that the waterproof performance specifications apply to: fresh water, tap water, sweat. They are not applicable to liquids other than the above (soapy water, pool water, seawater, etc.)

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and batteries and dispose of it

appropriately.

No liability will be accepted for any personal injury or damage caused by failure to follow these instructions.

This product contains materials that should not be disposed of with your household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

# Caring for the Environment

## Responsible Disposal of Packaging

The packaging of your Portable Wireless Speaker has been selected from environmentally friendly materials and can usually be recycled. Please ensure the packaging is disposed of correctly. Plastic wrap can be a suffocation hazard for babies and young children, so please ensure packaging materials are out of reach and are safely disposed of, and are recycled where possible.

## Responsible Disposal of Appliances


At the end of its working life, do not throw out this Portable Wireless Speaker with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for

recycling. Contact your local authorities for advice on recycling facilities in your area. The plug must be rendered useless and the cable cut off directly behind the sound bar to prevent misuse.

## Contents in the Box

The items below are included in the box. Remove all items and retain the packaging until you have checked that the device is undamaged and in good working order. Ensure packaging materials are out of reach of children and disposed of safely.

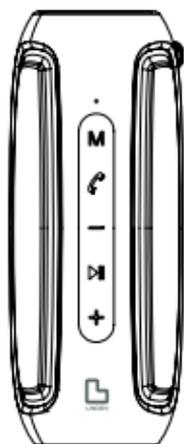


Portable Wireless Speaker




User Manual



 Carabiner



Aux Cable

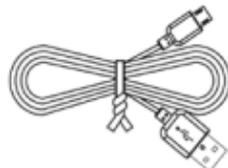


Micro USB Cable

# Operating Instructions

## Getting Started


Before beginning operation please get familiar with the controls and input locations of the Portable Wireless Speaker.

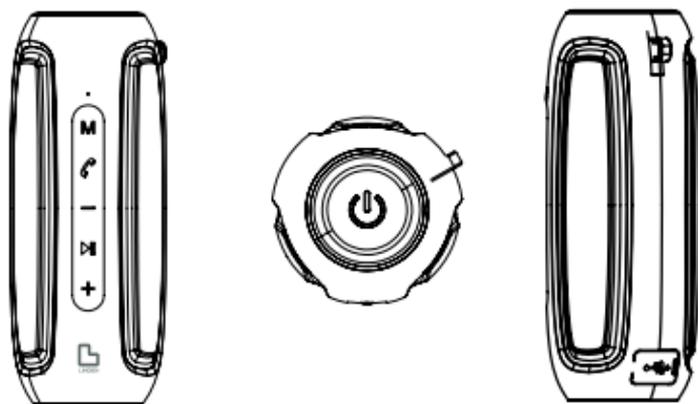

## Basic Button Function

### Volume Increase and Next Control


Short Press to increase the volume. In Bluetooth mode:  
Long press to go to next track or song selection.

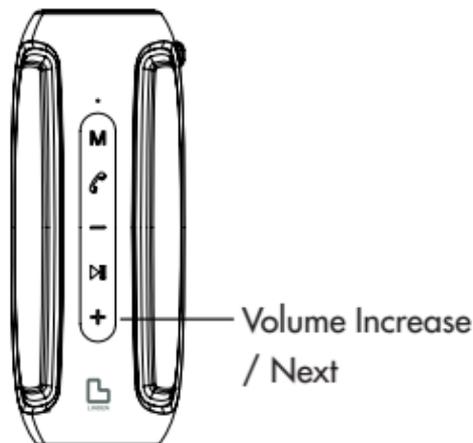

## Volume Decrease and Previous Control

Short Press to decrease the volume of your Portable Wireless Speaker. In Bluetooth Mode. Long press to go to previous track or song selection.


Volume Decrease /  
Previous

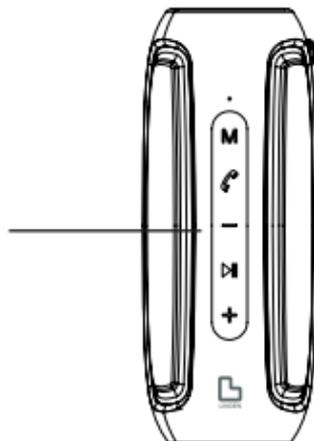

## Power ON / OFF

Long press to power the Portable Wireless Speaker ON or turn OFF.


Power ON / OFF

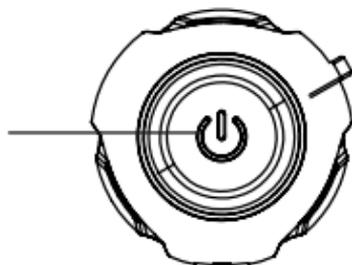

## Play and Pause Control / Bluetooth Disconnect


Short press to Play / Pause track in Bluetooth mode.

Long press to disconnect current Bluetooth connection.

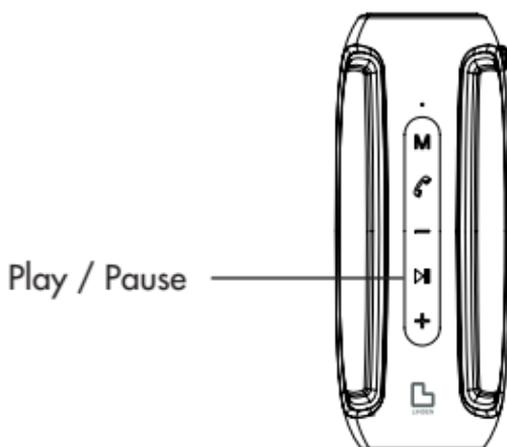

## Handsfree Function

Short press to hang up and pick up phone call when a mobile / cell phone is connected via Bluetooth.

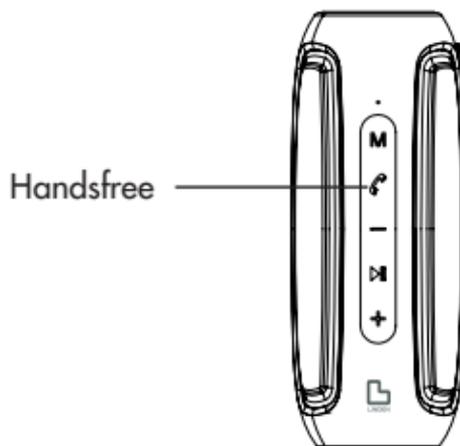

## Making a Bluetooth Connection

To make a wireless Bluetooth connection between your device and your Linden Portable Wireless Speaker please follow these instructions:

1. Activate the Bluetooth function on your desired device. This may be on your mobile phone, smart phone, tablet, computer or other Bluetooth-enabled device.
2. Once activated, long press the power button on the Portable Wireless Speaker to turn the speaker ON.
3. When in pairing mode, the Portable Wireless Speaker LED on the top of the speaker will flash blue.
4. Enter the Bluetooth settings on your selected device to search and select 'LINDEN – LPBSK17'  
Note: If your device requests a pairing code please enter '0000'.
5. Once Bluetooth pairing is successful, the Portable Wireless Speaker will sound a prompt tone and LED light will remain constant blue.
6. While playing music in Bluetooth mode through the Portable Wireless speaker, the blue LED will slowly flash blue.

7. To disconnect the current Bluetooth connection, press and hold Play / Pause button until you hear a sound prompt and the LED light flashes.

Tips: Volume controls can be controlled on connected device and speaker. Ensure volume is at a suitable level on both your device and/or the Portable Wireless Speaker.

Please Note: Pairing time varies between devices. If you have paired to the Portable Wireless Speaker to your device, the Portable Wireless Speaker will automatically pair again with your device when turned on and off.

### Making an AUX Connection

To make an AUX connection between your device and the Linden Portable Wireless Speaker please follow these instructions:

1. Using the supplied 3.5MM AUX cable, insert one end into the AUX input on the Portable Wireless Speaker.
2. Insert the other end of the supplied 3.5mm AUX cable to your selected audio output 3.5mm jack.
3. Once successfully connected, the speaker will sound a prompt tone.

Tips: Volume controls can be controlled on connected device and speaker. Ensure volume is at a suitable volume on either device and/or speaker.

### Making a TF/SD card connection

To play media through your speaker from a TF/Micro SD card

please follow these instructions:

1. Insert your Micro SD/TF card into the Micro SD/TF card input on the Portable Wireless Speaker.

Note: Your TF / Micro SD card must have your desired MP3 files stored for playback.

2. Once successfully inserted, your media will automatically begin playback.
3. Volume, Play, Pause, Previous and Next controls are all active with TF/SD card playback.



Micro SD/TF card input

## Charging the Speaker

When your Linden Portable Wireless Speaker is in a low battery state, it will provide a hint tone.

To charge your Linden Portable Wireless Speaker, connect the supplied micro USB cable to the micro USB charging port. Insert USB connection into 5V-500mA USB output power supply. When charging, the LED indicator beside the charging port will remain constant RED. Once charging has finished the LED indicator will turn off.

Note: Estimated charging time around 2-3 Hours

## Hands-free Function

Your Linden Portable Wireless Speaker is equipped with a microphone for Handsfree function when a Bluetooth connection is made through a mobile or smart phone.

When receiving an incoming call, the Linden Portable Wireless Speaker will ring to indicate an incoming call. Press the circle button on the side of the speaker to pick up and hang up the phone call. For out-going calls, hang up and pick up function are also functional.

## IPX6: Water Resistant Rating

Your Linden Portable Wireless Speaker has been tested to IPX6 water resistant standard.

**IMPORTANT:** Liquids that the water resistant performance specifications apply to are fresh water, tap water, sweat. The water resistant performance specifications does not apply to liquids such as soapy water, pool water, seawater, etc.

**IMPORTANT:** This speaker is not designed for SALT or SEA water. If it is exposed to SALT or SEA water, it must be immediately rinsed with fresh water and dried thoroughly.

**IMPORTANT:** This speaker is water resistant, however appropriate care **MUST** be taken to ensure the lifetime and quality of your speaker. When this speaker is exposed to water, it is important that you take appropriate steps to ensure that all closures are closed and to dry and drain the water from cavity areas.

## Troubleshooting

If you experience a problem with your Linden Portable Wireless Speaker please refer to the troubleshooting table below. If you are unable to resolve your problem, please contact customer care for further advice.

Cannot locate LINDEN – LPBSK17 on any of my Bluetooth-enabled devices

- Make sure the Bluetooth speaker has entered pairing mode and LED indicator is flashing Blue.
- Ensure the speaker is within the effective working range; your speaker must be within 8-10m of your selected device.
- Turn your Bluetooth on and off on selected device; disconnect any devices that may have existing connections with your device

The Portable Wireless Speaker has no sound or the speaker volume is very low

- Ensure both volumes on your connected device and speaker have been adjusted

- Ensure the speaker is fully charged

The music/audio breaks up and distorts

- Ensure your connected device is within 8-10m of the speaker and there are no solid barriers between your device and speaker.
- Ensure your speaker is fully charged

Why can't I remotely control the pause, play, previous song and skip track functions with the speaker when playing music?

- Skip and Previous functions are only synchronized when a Bluetooth connection is made. Skip and Previous function using + - on your speaker do not work in AUX mode.

## Technical Specifications

Product Dimensions	93 x 84 x 33mm
Power Input	Micro USB 5V 500mA
Total Power Output	9.5W (4.75W x 2)
Speaker Configuration	1.5" Speaker Driver x 2 + Passive Radiator
Battery Capacity	600 mAh
Water Resistant	Water resistant IPX6 Rating - Water projected in powerful jets (12.5 mm nozzle) against the enclosure from any direction shall have no harmful effects
Box Contents	Linden Portable Wireless Speaker, Micro USB Cable, Carabiner, User Manual, 3.5mm AUX Cable

Some functions may not be supported depending upon your phone, tablet, and/or application.



While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.

Distributed by:  
M.E.W. (Australia) Pty Ltd,  
15 Vaughan St, Essendon Fields, VIC 3041  
ACN 152 719 036  
Customer care: Aus-1300 530 800  
customer care@lindenproducts.com.au  
lindenproducts.com.au



E2284

